
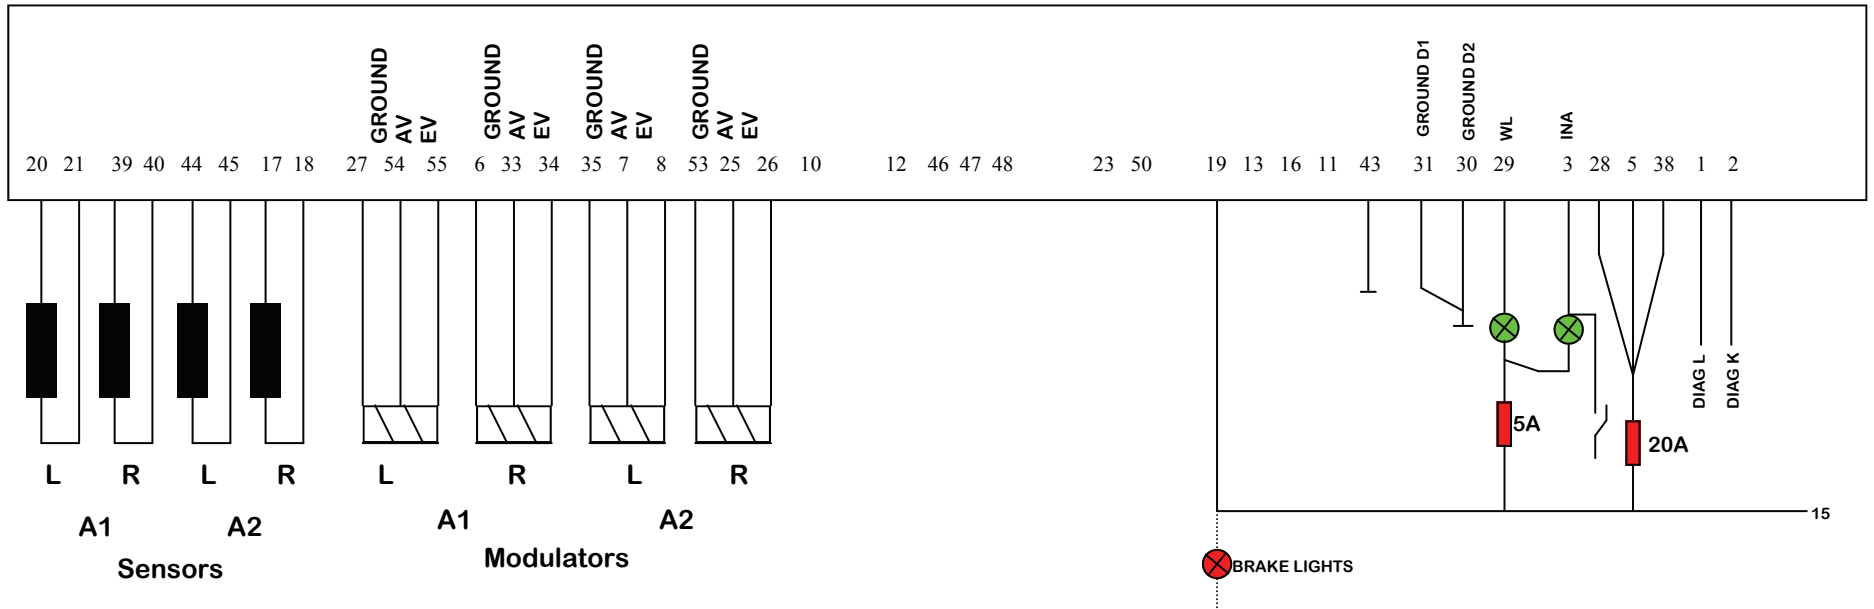


GAMMA CP SYSTEM 4S/4M

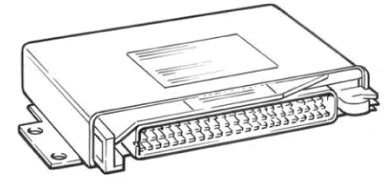

Connect a switch (Diagnostic Push Button) between the pin labelled 'DIA L' of the ECU and Ground

Blink Code display (i.e. a sequence of flashes) may be initiated.

The Blink Code will be displayed on either the Dashboard ABS Warning Lamp (INA) or the Traction Control Warning Lamp (ASR). Consult the Vehicle Manufacturer's Handbook to establish which lamp is used and where it is located.

