
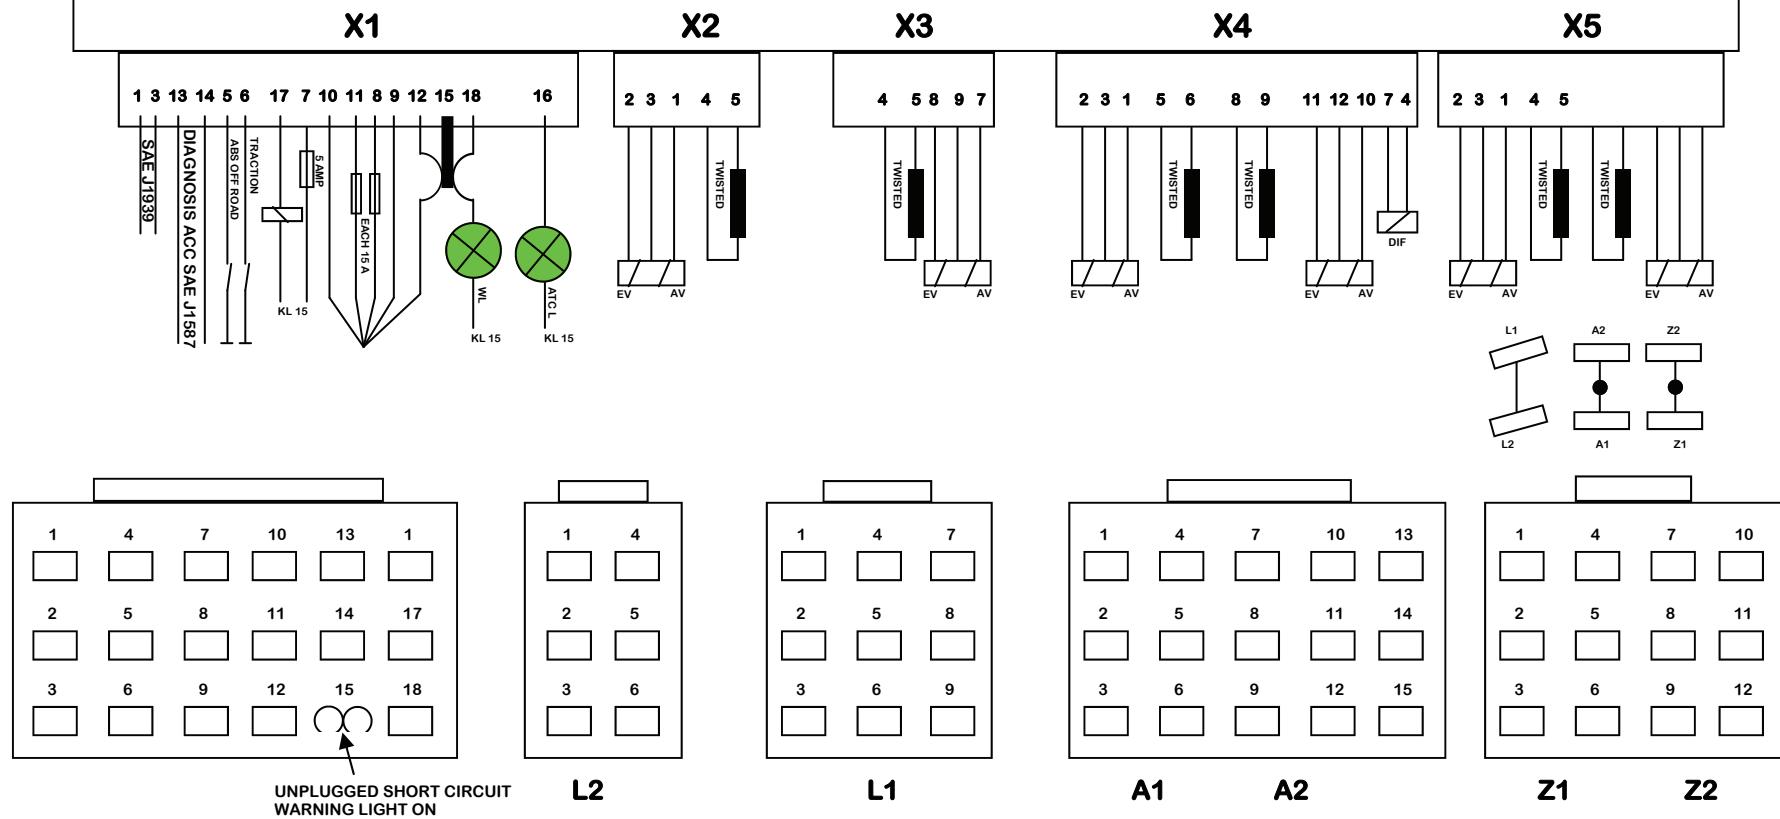


ABS/ATC D VERSION

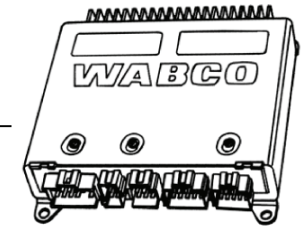

This is a basic wiring diagram for a ABS/ATC D VERSION system, some ECU'S in this range may differ slightly.

The ECU numbers this diagram applies to are as follows:
(all numbers start with 446 003 ...)

**401. 402. 403. 404. 405. 406. 407. 408. 409. 419. 418. 417. 416. 414. 413.
410. 420. 421. 422.**